

## GoPro MAX Guide








The GO PRO Max is GoPro's latest installment of 360 action cameras with three unique styles, spherical footage, HERO-style and vlogging.

Available to:



- Students, Faculty, Staff

**Loan Time: 3 DAYS**


### Quick Start

- Press the mode button  located on the side of the camera to turn the power on.
  - Once on, the touch screen will light up and the battery will be displayed in the top right corner 
  - The screen also displays the type of shot in the upper center . This can be changed by swiping to the right. The three modes are: 360-time lapse, video and photo.
  - The icon in the top left corner displays the storage space left on the camera and will change from number of photos to hours of film depending on the type of footage.
- To switch between 360 mode and standard video, press the icon in the bottom left or swipe right 
  - 360 mode: MAX uses six microphones for 360 surround sound, with the icon displayed in the bottom right indicating the primary lens you'll be using.
  - Standard video:
    - Stability mode adapts to sudden changes in the camera angle to keep videos smooth, located on the central right 
    - Max SuperView (13mm) and Narrow (27mm). The clock icon can be found on the central left 
  - These settings can further be changed by clicking on Video displayed in the bottom central  and then, clicking the pencil icon.

### Recording


- To start and stop recording videos or time lapses, press the shutter button  located on the top of the camera. For photos, pressing the red circle will initiate either a PowerPano or Photo. PowerPano takes 270° distortion-free panoramic photos by using both cameras.
- Once recorded, swipe up to view your media. Here you can tag favorites, delete items and view past media.
- To upload media from the GoPro, use the usb-c to usb adapter found within the GoPro kit. On the side opposite to the power button the usb-c plug can be found along with the battery .

Side View

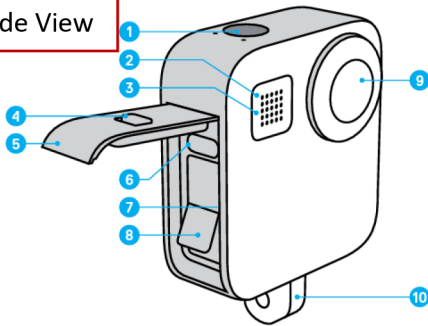


- |   |                       |
|---|-----------------------|
| 1. Shutter Button  | 5. Door               |
| 2. Status Light   | 6. USB-C Port         |
| 3. Microphone   | 7. microSD™ Card Slot |
| 4. Door Lock  | 8. Battery            |

Front View

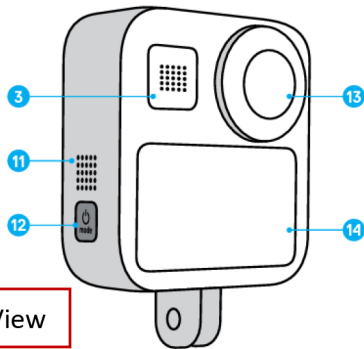

- |                                  |   |
|----------------------------------|---|
| 9. Camera Lens (Non-Screen Side) | 12. Mode Button  |
| 10. Folding Fingers              | 13. Camera Lens (Screen Side)   |
| 11. Speaker                      | 14. Touch Screen  |

Camera View

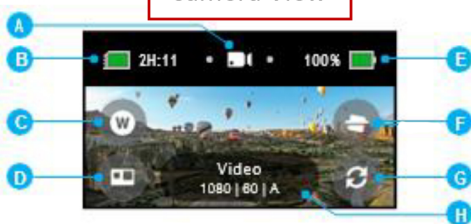

### Using the GoPro MAX App

- You can use the app to control your camera remotely, view your photos and videos and share on the fly.
- The app can also be used to update your camera and can be done from a smartphone or tablet with access to Wi-Fi.
- While the GoPro App is not required for using the GoPro MAX, it also allows you to edit footage and have access to cloud storage with an annual subscription.



GoPro (2021). MAX User Manual (p. 7,17). Retrieved from [https://gopro.com/content/dam/help/max/manuals/MAX\\_UM\\_ENG\\_REVB.pdf](https://gopro.com/content/dam/help/max/manuals/MAX_UM_ENG_REVB.pdf)